

Smartree Technology CO.,Ltd

Prepared by: lsh

Date: 20260128

Version: 12

Model: baby 6TS_usermanual

Size: 75.5*110 mm

修改内容: 最后一页增加FCC的说明

最后一页增加警告语



WIFI BABY MONITOR

Connected Care, Peaceful Parenting.

QUICK GUIDE



Li-Ion

What's in the box

Please consult this checklist for all parts.



Camera



Monitor



USB cable x 2



Power adapter x 2



Screws



Bracket




Manual



Reset pin

Description

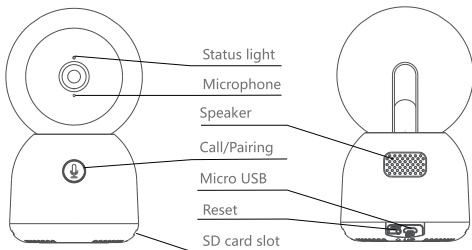

Micro USB	Type USB DC5V/1A
-----------	------------------

Microphone	Capture sound for your video
------------	------------------------------

SD card slot	Support local SD Card storage (Max.128G) *Not included
--------------	--

Status light	• Blinking red light: wait for network connection (slow) connecting the network (fast)
--------------	--

	• Solid blue light on: camera is working correctly
--	--

	• Solid red light on: camera is malfunctional
--	---

Call/Pairing	Press to make a call; long press to pair
--------------	--


Reset	Press and hold for 5 seconds with pin to reset the camera (if you have modified settings, they will return to factory defaults)
-------	---



Bivolt: 100-240V

50/60Hz Power Supplies

Description

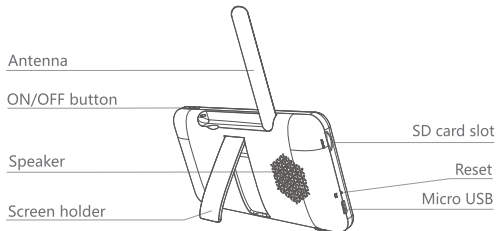


Micro USB	Type USB DC5V/1A
Status light of charging	• Orange light: Charging • Green light: Fully charged
Status light of using	• Yellow light: The monitor is on • No light: The monitor is off
Microphone	Capture sound for your video
Antenna	Adjust the angle to get better signals
ON/OFF button	Long press 5 seconds to turn on and turn off the monitor
Zoom in/out	Zoom the image in 1X, 2X or 4X
Menu	On homepage, press to enter the menu interface; On homepage, long press to enter the setting interface
Direction	Control the rotation directions; select the menu items
OK	Confirm
Call	Make a call after pressing the button
SD card slot	Support local SD Card storage (Max.128G)
Reset	Press with pin to reset the monitor
Back	Press to back up; On homepage, long press to stop playing music

Installation


Method 1:

Install the camera on a flat surface.

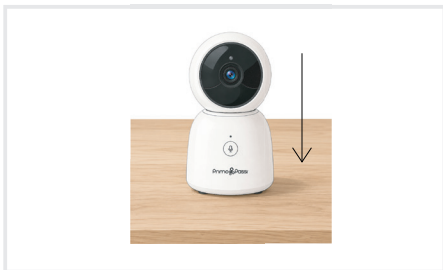

Method 2:

Use the included mounting bracket to fix the camera to a clean surface.

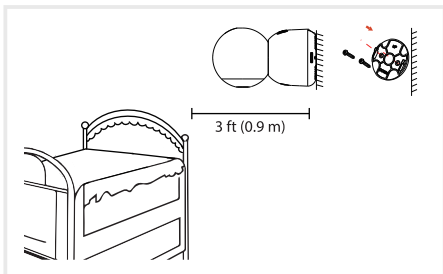

Connect the camera to the App

The camera can be connected both to the monitor and the App. Generally, it is connected to the monitor by default.

Follow the steps below to connect the camera to the App:

1. Make sure the Wi-Fi network is a 2.4 GHz network, as the camera doesn't support 5 GHz Wi-Fi.
2. Download the corresponding App on your phone. Register a new account to log in or log in directly.
3. Reset the camera using a pin until the status light is fast blinking red.
(You have to connect the camera to the App within 2 minutes; otherwise, you have to reset the camera again.)
(If you are using the monitor, the audio and video will be temporarily disconnected, and will automatically resume after the camera is successfully configured with the network. The maximum time is 2 minutes.)
4. Follow the step instructions on your smart phone to add the camera, and scan the QR code with your camera.

App Download

The App is available for both iOS and Android OS. Scan the QR code or search "CloudEdge" at App Store and Google Play. Download and install the App at your phone. You can select the App according to needs.

Support



iPad



iOS



Android



Set up router

The router supports the 2.4GHz WiFi (doesn't support the 5GHz), and is connected to the WiFi network. Please set the parameters of the router before connecting the WiFi network, and record the SSID and password of your WiFi.



Pairing of camera and monitor

Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance limited, so keep the distance between the camera and the monitor is no more than 200m.

- Unbind the monitor and camera:
 1. Press **Menu** button on the monitor screen, and select  > **Camera**.
 2. Select **Camera 1** or **Camera 2** which you need to unbind.
 3. Long press **OK** button to release the binding.
- Pair the monitor and camera:
 1. Press **Menu** button on the monitor screen, and select  > **Camera**.
 2. Select **Camera 1** or **Camera 2** which you need to pair.
 3. Long press the camera pairing button until you hear the prompt tone.
 4. Press **OK** button on the monitor screen to start pairing.
 5. (Optional) For 2 cameras, repeat step 2 ~ step 4.



Note:


* For different products, you may add 1 or 2 cameras. If you have added 2 cameras, the monitor screen will display 2 live views at the same time.

* **If you want to set parameters or enable functions of one of the cameras, you need to select the camera first.**

Camera selection method (2 cameras)

On home page, press  button to switch camera between Cam1 and Cam2 if you have added two cameras.

If you have added two cameras, select one camera you need and press **OK** button on monitor to enter full screen viewing mode. And then you can press  button again to zoom in and zoom out. ( button does not work when the screen is not in full screen.)

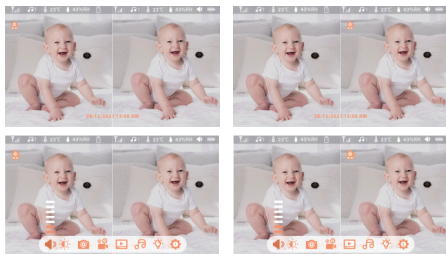

Rotate the camera

You can adjust the monitoring angle for a clear view.

The direction buttons on the monitor screen are available when the camera is powered on. Press direction buttons to rotate the camera horizontally and vertically, for a better vision.



Photo & video

- Take a photo:

You can take a photo when you want to capture an interesting scene of baby. Press **Menu** button on the monitor screen, select  and press **OK** to take a photo.

- Record a video:

You can record a video when you want to capture a meaningful time of baby. Press **Menu** button on the monitor screen, select  and press **OK** to record.

- View the taken photos and recorded videos:

1. Press **Menu** button on the monitor screen, select  and press **OK** to enter the interface.
2. Select the camera and date, select the photo or video you want to view, and press **OK** to enter preview mode.

* For a video, press **OK** to play or pause in the preview mode.


* Press backup button to quit preview or return to main menu.



Play music

You can play music to sooth your baby when baby is crying or sleeping.

There are various soft music to select. Press **Menu** on monitor, select  and press **OK** to enter. You can select different music, change music cycle mode, adjust the music volume.

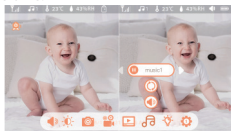

Night light

You can soothe your baby by setting a night light.

It is also possible to change the pattern and color of the night light.




1. Press **Menu** button on the monitor screen, and select  > **Camera Light** > **Night Light**
 2. Press UP and DOWN direction buttons to select options between smart night light, lighting mode and image settings, and press **OK** to start setting.
 3. When start to set up smart night light, press UP and DOWN direction buttons to select night light on/off status, and press **OK** to save.
 4. When start to set up lighting mode, press UP and DOWN direction buttons to select Three night light modes (light always mode, marquee mode and breathing light mode), and press **OK** to save.
 5. When start to set up image setting, press LEFT and RIGHT direction buttons to select the color, and press **OK** to save.
- * Image setting only works in two modes of **Light Always** and **Breathing Light**.

Feeding reminder


Remind you to feed your baby, when you are too busy, or when you want to give your baby a regular diet.

1. Press **Menu** button on the monitor screen, and select  > **Feeding Reminder**
2. Press UP and DOWN direction buttons to select between 10 time options, and press **OK** to start time setting.
3. When start to set up one feeding time, press LEFT and RIGHT direction buttons to change options between hour, minute, second and on/off; and press UP and DOWN direction buttons to change values and select on or off
4. Select on or off to open or close feeding reminders. You can set up to 10 feeding times one day. And when the set time is up, a feeding alarm will appear on the monitor screen.

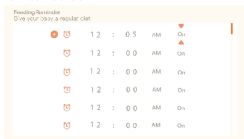

Safety Protection


You can turn on or turn off the Wi-Fi network channel so that others cannot live view the videos by App if the function is off. And you can also view the visited records as all visits through the App will be recorded.

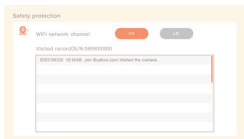

Temperature and humidity detection

You can real-time monitor the temperature and humidity of your baby room. When the temperature and humidity are out of range, you can get the alarms immediately, and then take measures.

1. Press **Menu** button on the monitor screen, and select  > **Temperature and humidity**.
2. Press UP and DOWN direction buttons to select options between temperature range, humidity range and out of range reminder, and press **OK** to start setting.
3. Press LEFT and RIGHT direction buttons to change options, and press UP and DOWN direction buttons to change values and units.
4. In **Out of range reminder** option, select to turn on or off the alarm when the temperature and humidity are out of range.

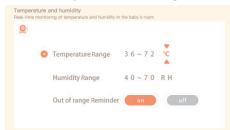

Smart care

You can turn on functions of motion detection, noise detection and cry detection, so that you can know the baby status immediately, no matter you are sleeping, working, cooking and so on.

1. Press **Menu** button on the monitor screen, and select  > **Smart Care**.
2. Press UP and DOWN direction buttons to select options between motion detection, noise detection, cry detection and alarm volume, and press **OK** to save.
3. When start to set up one detection mode, press LEFT and RIGHT direction buttons to change options, and press UP and DOWN direction buttons to adjust sensitivity.
* You can select different sensitivity according to needs. Low is low sensitivity, and high is high sensitivity.
4. When set up the alarm volume, press LEFT and RIGHT direction buttons to adjust.
5. There will be an alarm when the set detection is triggered, press **OK** to stop alarm.

General setting

- Set up brightness:
 1. Press **Menu** button on the monitor screen, select  and press **OK** to enter the interface.
 2. Press UP and DOWN direction buttons to adjust brightness.
- Set up time:
 1. Press **Menu** button on the monitor screen, and select  > **Time setting**
 2. Press direction buttons to change date, time and time displaying mode.
- Set up language:
 1. Press **Menu** button on the monitor screen, and select  > **Language**.
 2. Select the language you need.
- Set up sleep mode:

You can set up sleep mode to increase standby time.

 1. Press **Menu** button on the monitor screen, and select  > **Sleep mode**.
 2. Select sleep mode as 1 minute, 5 minutes, 10 minutes, 30 minutes, 60 minutes or off.
- Turn on and off status indicator:

If you turn on the status indicator, you can get the working status of the camera. You can also turn off the status indicator, if you think it will affect your baby's sleep.

Press **Menu** button on the monitor screen, and select  >  **Open** .
(Or Press **Menu** button, select  > **Light** > **Status light**.)
- SD card:
 1. Press **Menu** button on the monitor screen, and select  > **SD card management**. Then you can view the total capacity and remaining capacity of your SD card.
 2. (Optional) You can format the SD card as you needed, but make sure that the important data is backed up.
- Low battery alarm:

When the monitor is low on battery, the low battery alarm will appear on the monitor screen. Please charge the monitor as soon as possible.

Q: The monitor cannot be previewed properly?

A: Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

Q: Cannot find the pairing button?

A: The pairing button is the call button of the camera. Long press the button for 3 seconds, and follow the step instructions of the monitor.

(To enter the pairing interface of the monitor, press Menu button on the monitor screen, and select  > Camera Management.)

Q: What if the monitor screen is stuck and it doesn't work while pressing any buttons?

A: Press the reset button of your monitor with the pin, and then long press the power button of your monitor to restart it.

Q: Why the camera or the monitor cannot identify the SD card?

A: Confirm whether the SD card is normally available and the format is FAT32.

Q: Why can't I get the notifications with my cell phone App when I connect the camera to the monitor?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

Q: Why the monitor can't view video after the camera is connected to the App?

A: The monitor has a 2 minute interruption time when the camera is reset, and it will automatically resume after 2 minutes. If it doesn't recover, try to pair the monitor and camera again.

Functions

Pan/Tilt

Rotate your camera by sliding on your smartphone, providing you with a clear view.

Video flip

Flip your video stream up or down for maximum flexibility.

Motion detection

The camera can detect movement, and then the camera will send you push notifications and app alerts.

Crying detection

The camera can detect the crying of your baby, and the camera will send you push notifications and app alerts.

Temperature & humidity detection

The camera can detect the temperature and humidity of the environment, and the camera will send you push notifications and app alerts.

Record

Support 24H continuous recording with high capacity SD storage or Cloud storage.

Day & Night

Never miss a moment, even in complete darkness, with powerful night-vision technology.



Daytime



Night

Safety

1. Product contains small parts, take care when unpacking and assembling the product.
2. Cords present a potential strangulation hazard. Keep cords out of reach of children: 90 cm.

Caution

1. This device is designed for indoor use only.
2. The units should not be exposed to rain or moisture.
3. The units should not be exposed to direct heat sources such as radiators, stoves or other devices that produce heat.
4. This product is not a toy and should be kept out of children's reach.

Warning

1. Check if the voltage indicated on the adapter corresponds to the local main voltage before you connect the device.
2. Only use the adapter supplied with the product.
3. Do not modify or cut off any part of the adapter or its cord. This may cause a hazardous situation.
4. Keep the packing material (plastic bags, cardboard, etc.) out of reach of children, as these are not toys.
5. Never put any object on top of the baby monitor and do not cover it. Do not block any ventilation opening.
6. To prevent electric shock, do not open the body of the baby monitor.
7. Never place the baby monitor inside the baby's bed or playpen.
8. Remove the power cord before cleaning the product.

Warranty

Primo Passi will replace or repair (at our option) your unit free of charge for 24 months from the date of purchase if the unit is defective in workmanship or materials, when used in normal conditions and in accordance with our user manual. Contact Consumer Care within 24 months of purchase from an authorized retailer.

*SD Card is not included.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING:

STRANGULATION HAZARD



Keep small parts out of reach of children.

**Children have
STRANGLED** in cords.

Keep this cord out of the reach of children (more than 3 ft (0.9 m) away), Never use extension cords. Use only the AC adapters provided.